



Installation guide "Wave ramp" cover for Jaws


1. Pull playfield out to where rubber stoppers are resting on front edge of cabinet.
2. Disassemble the upper clear plastic in front of the wave ramp



3. Take the wave and slide it in front of the wave ramp, coming from the right. Push it all the way to the left until it stops.



4. Have a look, if everything is flush and looking good

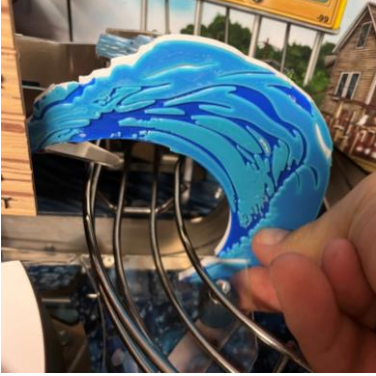

5. If everything is looking fine, take it out again and remove the protective layer of the adhesive on the back of the wave
6. Put it back again the way you did it before. Then push it backwards onto the metal ramp.
7. Make sure the round cut-outs on the back of the wave go onto the protruding metal parts of the ramp.
8. In the end it should look like this.

